


SEE SHEET 2 OF 2 FOR SECTION "B-B"

NOTE:
ACCESS HATCH SHALL BE SIZED TO ALLOW FOR INSTALLATION AND REMOVAL OF GRINDER UNIT.

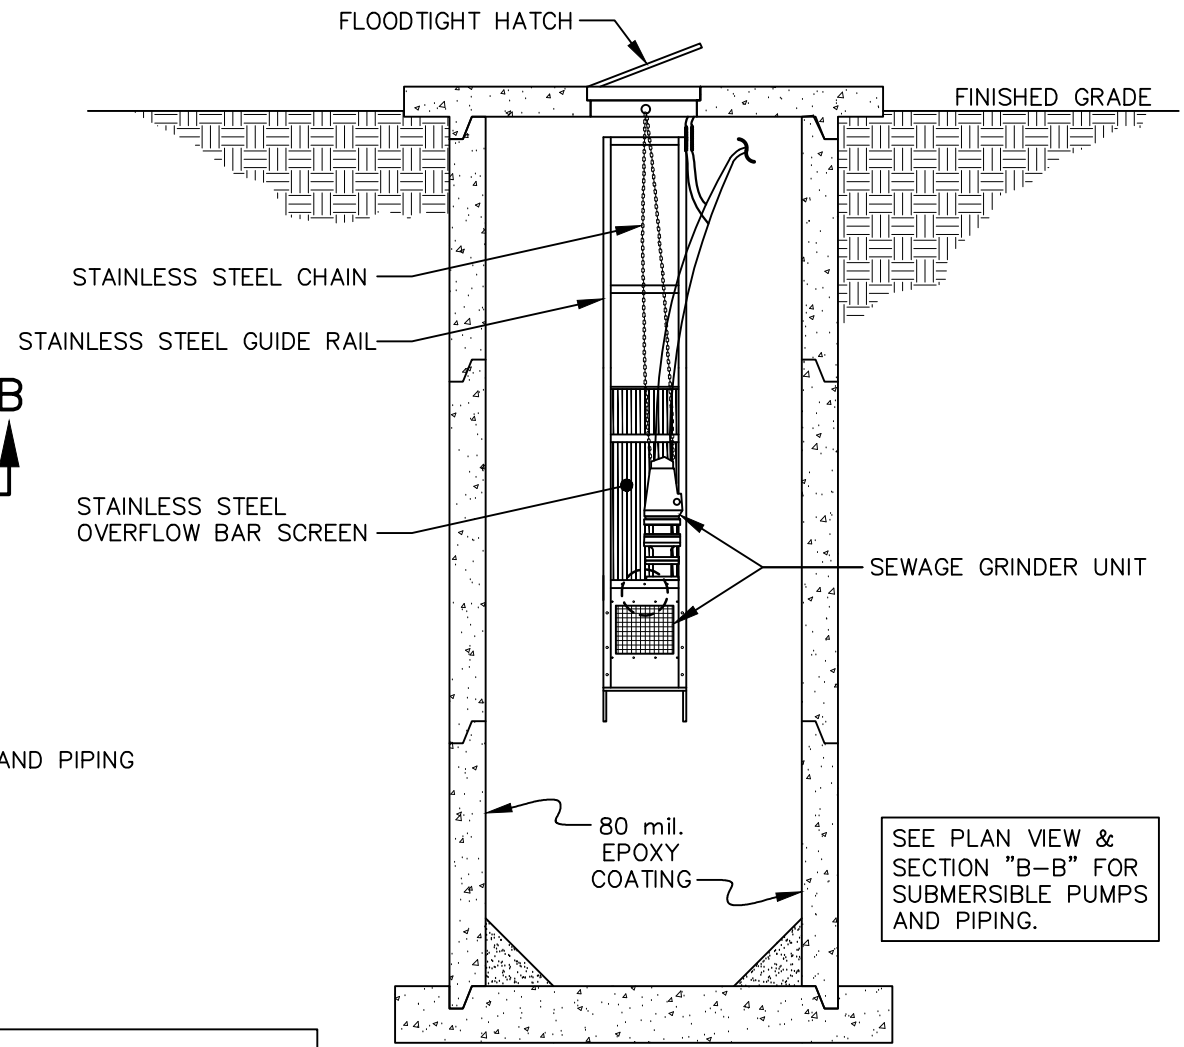

SEE PLAN VIEW & SECTION "B-B" FOR SUBMERSIBLE PUMPS AND PIPING.

SECTION "A-A"

EFFECTIVE: / / 22

DETAIL No.
07500.04
SHEET 1 OF 2